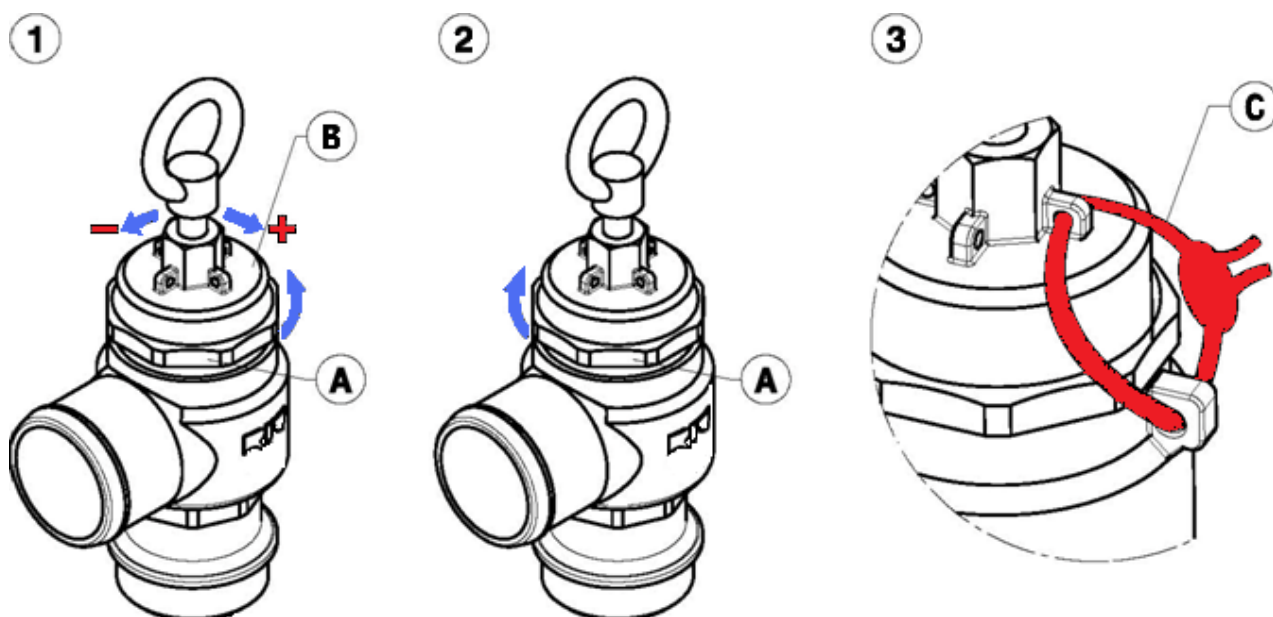


**>> Riv 230 RIV 250 – PRESSURE RELIEF VALVES - SETTING INSTRUCTION****>> Picture 1**

- 1) Unscrew the lock nut "A"
- 2) Turn the spring-tightener "B"  
Clockwise to increase the pressure  
Anti-clockwise to reduce the pressure

**>> Picture 2**

Once obtained the desired pressure, screw down the lock nut "A"

**>> Picture 3**

Fix the setting, using the rings "C"  
Situated on the body and on the spring-tightener